



FEEL THE HEAT!

DragonFire SoftTop

Part # **04-2801** 2 Seats CanAm Maverick X3 Black

Congratulations on your purchase of the DragonFire SoftTop. This product has been designed around the stock cage to give you a lightweight, easy to use, and stylish roof on your factory UTV. Be sure to check out the full line of DragonFire Accessories for your vehicle at your local authorized dealer or online at <http://www.DragonFireRacing.com>

2 Seats UTV SoftTop: 6 Clamps

WARNING

- Read and understand these instructions before installing product
- This product does not provide roll over protection
- Ensure doors are securely latched and locked prior to operating vehicle
- Discoloration may occur overtime due to environment condition
- Do not use product if there are any signs of damage

Disclaimer

Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.

Tools Required
5/16" Socket
Ratchet
Flat Screw Driver

Step 1: Place vehicle on a flat and level surface. Place gear selector in "Park" and remove keys from the ignition.

Step 2: Lay the SoftTop out on the floor upside down (should be able to see Velcro mounts) insert rubberized band clamps through sleeve located in corners of the SoftTop. Make sure the bolt head side of band clamp is on top of elastic portion of band clamp cover (Figure A & B).

Step 3: Place SoftTop on the top of vehicle cage with the Velcro mounts pointed down. The wider side portion of SoftTop is the back (Figure C).



A



B



C





DragonFire

Step 4: Start by install all corner band clamp mounts using 5/16" socket or flat screwdriver. Make sure the straps are securely fastened. Do not worry about alignment at this time; start with the rear mount as shown with arrow (Figure D).

Step 5: Install the rear mount as shown with arrow (Figure E). Repeat Step 4 & 5 for opposite side.

Step 6: Install the front band clamp mounts using 5/16" socket or flat screwdriver (Figure F). Use the pull strap to help with tighten the soft top over the frame (Figure F, Arrow).

Step 7: Check to ensure that Soft Top are taut and all band clamp mounts tightened. Repeat previous if proper alignment is not reached at the time of completion (Figure F).

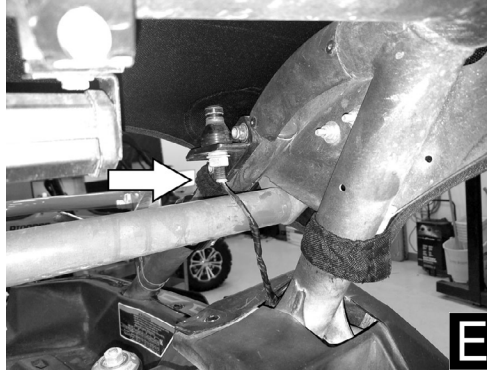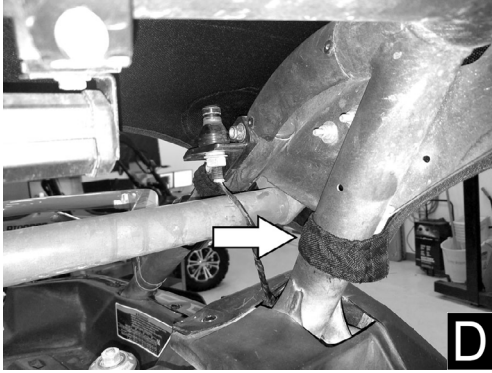

Step 8: Wrap Velcro mounts around the cage at the point they fall in: 1 in the front and 1 in the rear. Make sure the straps are securely fastened (Figure G).

Step 9: Cover band clamps with stretchy Velcro cover at each corner (Figure H).

Step 10: This completes installation. Time to ride and enjoy!

ProTip: Periodically check all hardware and re-tighten if needed.

For further assistance please contact us at
customerservice@dragonfireracing.com or 1-800-708-9803.

