



CAN-AM® MAVERICK® X® DS

2014-2016 CAN-AM® MAVERICK® X® DS

ROCK LIGHT MOUNT KIT INSTALLATION INSTRUCTIONS FITS (4) A-SERIES®

*Light sold separately



KIT INCLUDES

- (1) 4-Piece Rock Light Mount #46551
- (8) M6 x 14mm long SS pan head bolts
- (8) M6 SS Nyloc nuts

IMPORTANT

Thank you for purchasing Rigid Industries® products for your Can-Am®. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with the installation.

It is strongly recommended that this product be installed by a professional.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

STEP 1

Install Rigid Industries A-Series light to mount using (2) M6x14mm long SS pan head bolts and (2) M6 SS Nyloc nuts. See Figure 1. (Repeat 4 times to create each assembly)

Figure 1

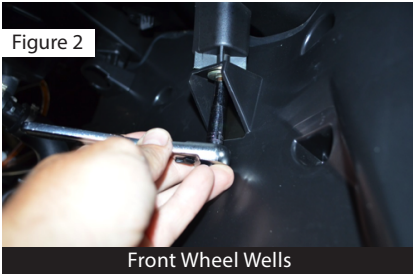


Figure 1.1



STEP 2

Remove front factory wheel well bolts and re-install bolts through each Rigid Industries rock light mounts. See Figure 2.



STEP 3

Remove rear factory wheel well bolts and re-install bolts through Rigid Industries rock light mounts. See Figure 3.



**Wiring: Wire your lights according to the instructions included with the light.
Take care to avoid any heat sources and sharp or abrasive surfaces.**

**Your installation is now complete.
Welcome to the Rigid Nation!**

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty

**Follow us on facebook at
[Facebook.com/RigidIndustries](https://www.facebook.com/RigidIndustries)**

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337 • www.rigidindustries.com
PKG-IS-183-A

Rigid Industries, Rigid, A-Series, are registered and/or common law marks owned by
JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.