



POLARIS® RZR® XP1000

2014-2016 POLARIS® RZR® XP1000

HEADLIGHT MOUNT INSTALLATION INSTRUCTIONS



46554 KIT INCLUDES

LIGHTS SOLD SEPARATELY

- (1) RZR Headlight Mount #46554
- (4) 1/4-20 x 3/4" Long SS Pan Head Bolts
- (8) 1/4-20 SS Flat Washers
- (4) 1/4-20 SS Nyloc Nuts
- (2) High/Low Wiring Harness Adapters
- FITS: (4) D-Series Lights (Sold Separately)

46560 KIT INCLUDES

LIGHTS INCLUDED

- (1) RZR Headlight Mount Kit #46560
- (4) 1/4-20 x 3/4" Long SS Pan Head Bolts
- (8) 1/4-20 SS Flat Washers
- (4) 1/4-20 SS Nyloc Nuts
- (2) High/Low Wiring Harness Adapters
- (2) Specter Driving, D-Series Lights
- (2) SAE Compliant, D-Series Fog Lights

IMPORTANT

Thank you for purchasing Rigid Industries® products for your Polaris®. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with the installation.


It is strongly recommended that this product be installed by a professional.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

STEP 1

Twist two knobs and remove hood.
See Figure 1.


Figure 1:

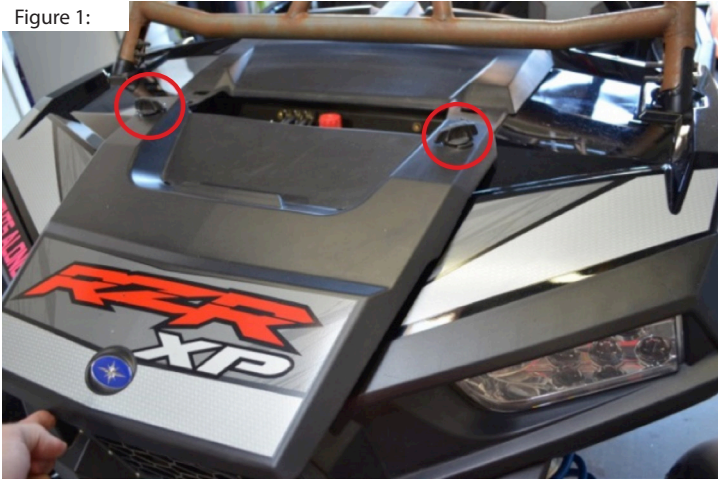

STEP 2

Remove and save (2) T40 screws under hood.
See Figure 2.

Figure 2:

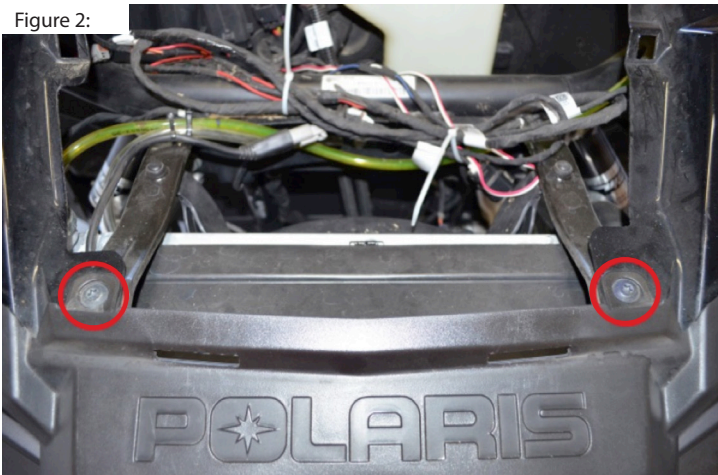

STEP 3

Remove and save (2) T40 screws on each side of headlights.
See Figure 3.


Figure 3: Driver side only shown



STEP 4

Remove and save (4) T40 screws from the front of the RZR.
See Figure 4.

Figure 4:

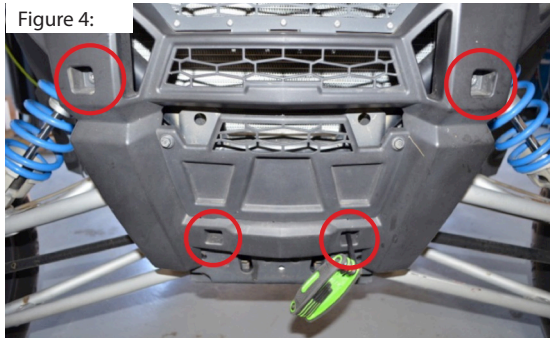

STEP 5

Unplug factory headlight harness from each headlight and remove entire assembly.
See Figure 5.

Figure 5:



STEP 6

Remove and save (3) T25 screws from each headlight.
See Figure 6.

Figure 6:



STEP 7

Remove headlight and (3) factory springs.
See Figure 7.

Figure 7:



Figure 7.1:



STEP 8

Trim (2) inner plastic standoffs flush with headlight bezel.
See Figure 8.

Figure 8:

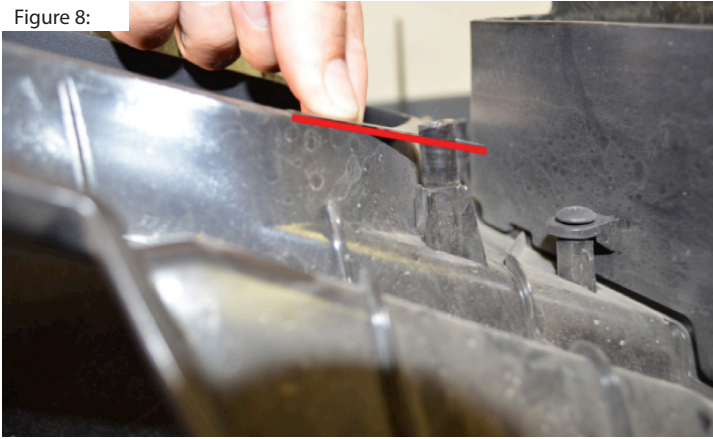


Figure 8.1: Bottom Inner Plastic Standoff




Figure 8.2: Top Inner Plastic Standoff



STEP 9

Assemble Rigid Industries Mount using (2) 1/4-20 x 3/4" Long SS Pan Head Bolts, (4) 1/4-20 SS Flat Washers, and (2) 1/4-20 SS Nyloc Nuts. See Figure 9.

Figure 9:

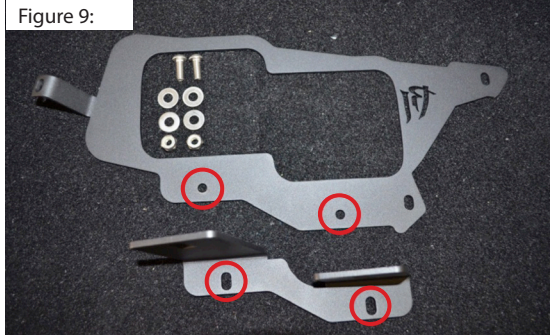

STEP 10

Install Rigid Industries assembly using (3) saved T25 screws from Step 6. See Figure 10.


Figure 10:



STEP 11

Install Rigid Industries lights using hardware provided with the lights. See Figure 11.


Figure 11:

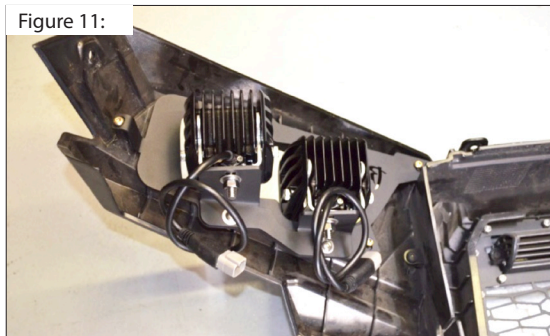

STEP 12

Repeat Steps 6-11 for remaining side.
See Figure 12.

Figure 12:

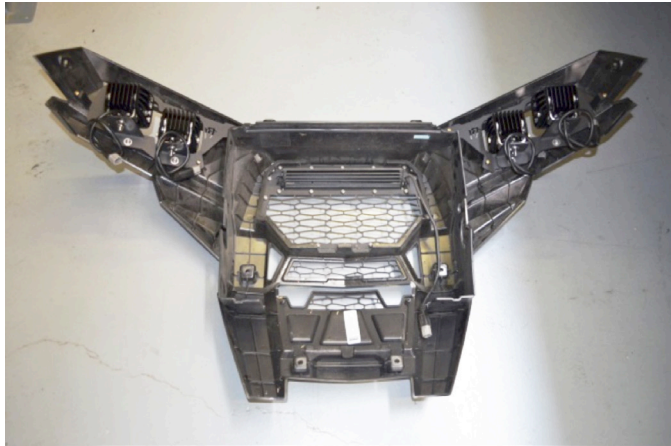

STEP 13

Re-install RZR Front following Steps 4-1.

STEP 14

Complete installation by connecting the power harness in the following manner:
1. Attach the 4 Pin connector (circled) to the PASSENGER'S side OEM connector. 2. Connect the POS and NEG ring terminals to the corresponding posts on the factory terminal strip. 3. Connect the 2 pin connector with the green wires to the low beam, and the connector with the yellow wires to the high beam. Mount the relays to the firewall to complete installation.

Figure 14:





**Your installation is now complete.
Welcome to the Rigid Nation!**

ALSO AVAILABLE FOR YOUR POLARIS RZR XP1000

B-PILLAR MOUNT (2 Seater Only) – FITS (2) D/DXL/R46/SR-Q or SR-M Series Lights – #46533



WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty

Follow us on facebook at
[Facebook.com/RigidIndustries](https://www.facebook.com/RigidIndustries)

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337 • www.rigidindustries.com

PKG-IS-190-C

Rigid Industries, Rigid, D-Series, Specter, SR-Q Series and SR-M Series are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.